

EC/ER4/ER10/ER16/ER64/ER128 ECM/ER4M/ER10M/ER16M/ER64M/ER128M



Please read this Operation Manual carefully before use, and file for future reference.

MADE IN JAPAN
QM-C0341E 002



⚠ CAUTION

- When operating the Product always consider the safety of the patient.
- Place the most priority for the safety of all patients.
- When it is found abnormal during use, stop immediately. Do not use, and report to the dealer that was purchased from.
- Do not disassemble the sheath except for the referred to herein, nor alter.
- Do not impact on the sheath, nor drop onto hard surface.
- Always watch for vibration, sound, temperature rise, bur wobble, and other abnormalities.
- Disconnect the sheath after the driver unit is in complete stop.
- The device accepts NSK Y-type heads.
- When the sheath might be subjected to a high torque, such as in implant application, use the I-type sheath (ER16i, ER20i, ER32i, ER64i, ER256i) with I-type head.
- In case blood or contaminants entered the head, immediately remove the head cartridge and the transmission gear. Clean and lubricate them. Assemble carefully.
- Do not wipe with, or clean or immerse in, high acid water or sterilizing solutions.

1. Speed

Allowable Max.Speed.....40,000min⁻¹ (rpm)

Sheath Type Motor Speed (min ⁻¹)	Bur Speed (min ⁻¹)					
	EC	ER4	ER10	ER16	ER64	ER128
	ECM	ER4M	ER10M	ER16M	ER64M	ER128M
40,000	40,000	10,000	4,000	2,500	625	312
30,000	30,000	7,500	3,000	1,850	469	234
20,000	20,000	5,000	2,000	1,250	312	156
10,000	10,000	2,500	1,000	625	156	78

Note: The bur speed might be slightly lower than the theoretical speed as given above, due to a loss at the gear train.

2. Contra Angle Heads

All NSK Y-type contra angle heads fit the sheath.
Set the contra angle head as shown in Fig.1 for alignment, and securely fasten the head nut


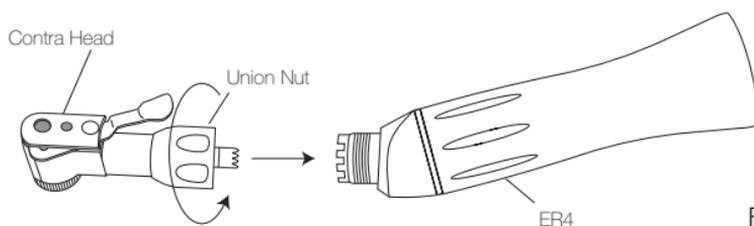


Fig.1

3.Lubrication

Supply PANA-SPRAY Plus / PANA-SPRAY after each use and/or before autoclaving.

- ① Push E-type spray nozzle attachment over the PANA-SPRAY Plus nozzle until it firmly seats.
- ② Shake the can 3-4 times to well mix lubricant and propellant.
- ③ Insert the E-type spray nozzle in the rear of the handpiece and spray for approximately 2-3 seconds until the oil comes out of the handpiece head or nose.

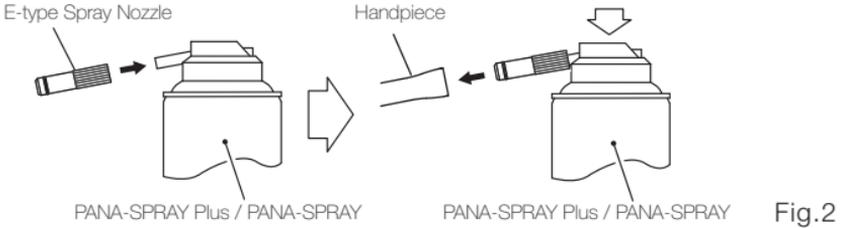

CAUTION

- Be sure to hold the handpiece firmly to prevent the handpiece from slipping out by the spray pressure when lubricating.
- Keep the spray can upright.

4.Cleaning and Sterilization



The products listed below are washable with Thermo Disinfectant. ECM, ER4M, ER10M, ER16M, ER64M, ER128M

Sterilization by autoclaving is recommended.

Sterilization is required first time you use and after each patient as noted below.

■ Autoclaving procedure

- ① Brush off dirt and wipe clean with alcohol-soaked cloth or paper towel.
- ② Remove reduction sheath from the motor and lubricate. Ref.3 Lubrication.
- ③ Insert into a sterilization bag and seal it.
- ④ Autoclavable up to a max. 135°C.
ex.) Autoclave for 20 min. at 121°C, or 15 min. at 132°C.
- ⑤ Keep the handpiece in the sterilization bag to keep it clean until you use it.

* Sterilization at 121°C for more than 15 minutes is recommended by EN13060 or EN ISO17665-1.



CAUTION on Sterilization

- Heating element may be located at the bottom of the chamber, and the temperature there locally may exceed the set value. Place the handpiece on the central or upper tray.
- Do not autoclave the handpiece, even when it is bagged, together with other instruments, from which chemicals are not sufficiently cleaned. This is to avoid discoloration and/or damage the plating of the handpiece.



The EU directive 93/42/EEC was applied in the design and production of this medical device.

NAKANISHI INC.

www.nsk-inc.com

700 Shimohinata Kanuma-shi
Tochigi 322-8666,
Japan

NSK America Corp

www.nsk-inc.com

700 Cooper Court
Schaumburg, IL 60173,
USA

NSK Oceania Pty Ltd

www.nsk-inc.com

Unit 22, 198-222 Young St.
Waterloo, Sydney,
NSW 2017, Australia

NSK Europe GmbH



www.nsk-europe.de

Elly-Beinhorn-Strasse 8
65760 Eschborn,
Germany

NSK France SAS

www.nsk.fr

19 avenue de Villiers
75017 Paris,
France

NSK Middle East

www.nsk-inc.com

Room 6EA-701, 7th Floor, East Wing No.6
Dubai Airport Free Zone,
PO Box 54316 Dubai, UAE

NSK United Kingdom Ltd

www.nsk-uk.com

Office 5, Gateway1000,
Arlington Business Park, Whittle Way,
Stevenage, SG1 2FP, UK

NSK Dental Spain SA

www.nsk-spain.es

C/ Modena, 43 El Soho - Európolis
28232 Las Rozas, Madrid,
Spain

NSK Asia

www.nsk-inc.com

1 Maritime Square,
#09-33 HarbourFront Centre,
Singapore 099253